

# Accessories



Part #27034

Modules are cut and removed as necessary to create the free space required for the remote access unit. Remote access unit walls can be removed to provide access in any direction, including the base.

**Remote access units can be installed inside or on the edge of the structure.**


## HD Remote Access Unit

The remote access unit is used to gain access to the installed ACO StormBrixx HD system.



The top-most remote access units are fitted with extension shafts.

Inspection cameras or jetting heads can be inserted vertically into the extension shafts integrated within the ACO StormBrixx HD structure.

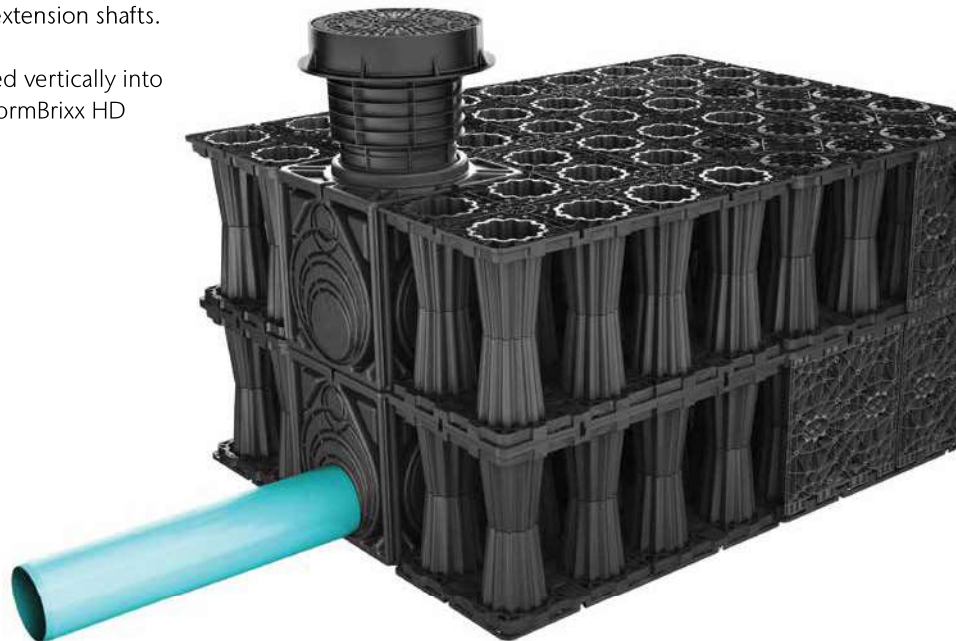

## Remote Access Plate


The remote access plate is used to gain access to the installed ACO StormBrixx HD system.

The top-most remote extension shafts are fitted with access chambers. Inspection cameras or jetting heads can be inserted vertically into the extension shafts integrated within the StormBrixx HD structure.

Molded remote access plate; replaces one half-module



Part #314075

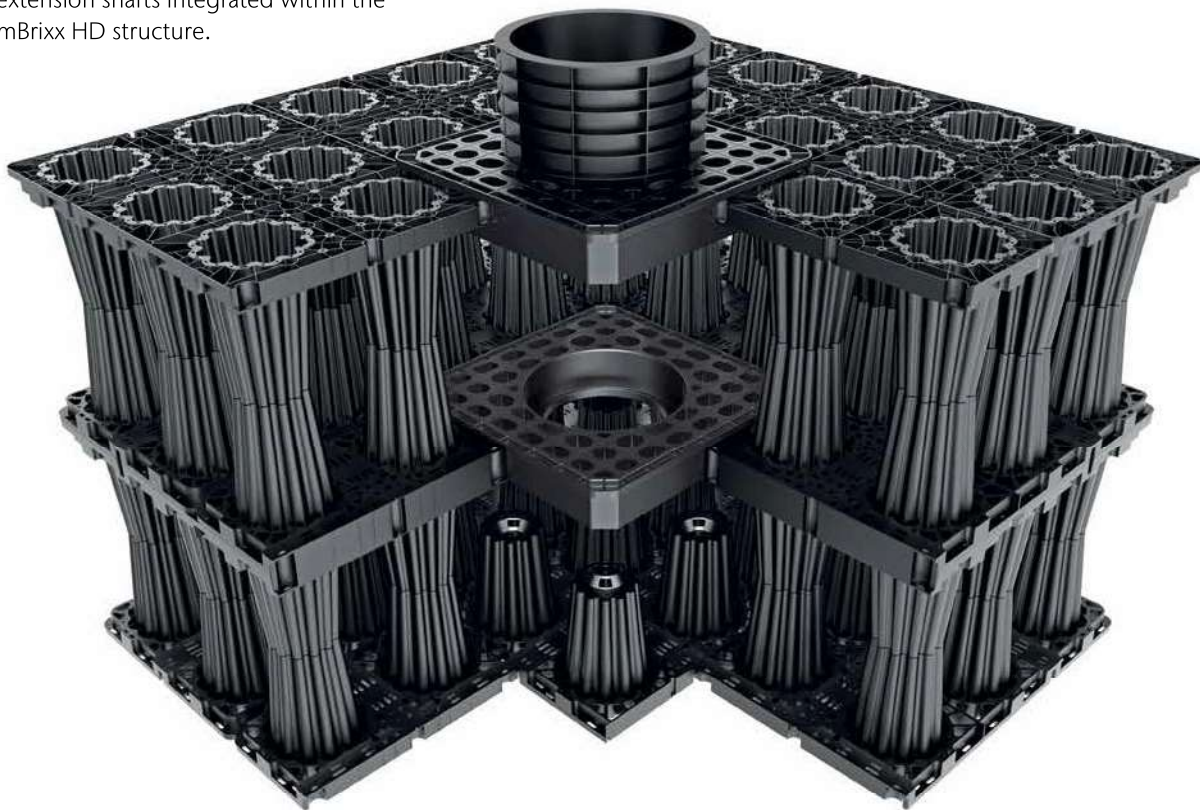

Layered modules are removed to allow free movement within the structure.

**Ensure the plate is not used on the edge of the structure; it can be used anywhere else.**